

DEC 15 2004

REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.

[illegible]

Vectran Fiber Time Dependant Behavior and Additional Static Loading Properties

Abstract

Vectran HS appears from literature and testing to date to be an ideal upgrade from Kevlar braided cords for many long-term static-loading applications such as tie-downs on solar arrays. Vectran is a liquid crystalline polymer and exhibits excellent tensile properties. The material has been touted as a zero creep product. Testing discussed in this report does not support this statement, though the creep is on the order of four times slower than with similar Kevlar 49 products. Previous work with Kevlar and new analysis of Vectran testing has led to a simple predictive model for Vectran at ambient conditions. The mean coefficient of thermal expansion (negative in this case) is similar to Kevlar 49, but is not linear. A positive transition in the curve occurs near 100 °C. Out-gassing tests show that the material performs well within parameters for most space flight applications. Vectran also offers increased abrasion resistance, minimal moisture regain, and similar UV degradation. The effects of material construction appear to have a dramatic effect in stress relaxation for braided Vectran. To achieve the improved relaxation rate, upgrades must also examine alternate construction or preconditioning methods. This report recommends Vectran HS as a greatly improved replacement material for applications where time dependent relaxation is a major factor.

Introduction

The EOS series launched in recent years used bury spliced loops of Kevlar braided cord to tie down the solar arrays during launch. A requisite tension remaining in the loops became especially critical during the cutting of the loops with thermal knives in orbit to deploy the arrays. Previous testing at Goddard SFC showed Kevlar has a high rate of stress relaxation with a wide margin of error in prediction. Additionally, it has complicated environmental response. Similar applications such as the GLAST Tracker Tower which use tensioning cables are also concerned with break strength, relaxation, Ultra-Violet (UV) degradation, abrasion, and ease of termination (splice etc...).¹

A search was made for a material with better performance characteristics than Kevlar, and the most promising was Vectran. See Table 6 in Appendix A for a comparison of fibers researched. Vectran is a liquid crystalline polymer (LCP). The resin is anisotropic before it is spun through tiny holes producing a highly oriented fiber structure with excellent tensile properties.²

Vectran is being considered as a possible replacement material primarily due to improved time dependant behavior. The manufacturer

claims the material exhibits no measurable creep when loaded up to 50% of its breaking load.² This statement is contradicted by NASA testing, but the measured and quantified creep is on the order of five times less than Kevlar.


Background

Table 7 in Appendix A reports material properties for Vectran with a direct comparison to Kevlar 49 as reported by available literature. Key points include improved strength, abrasion resistance, and creep performance.

Creep and Stress Relaxation

The time dependent load behavior of materials is characterized by creep and stress relaxation. Creep describes a material that experiences an increasing total strain with time under a constant load. Stress relaxation refers to a material that is initially strained to a fixed dimension, and then over time the stress within the material decreases. This phenomenon is observed to some degree in almost every engineering material with the exception of a perfect single crystal.^{3,4}

The activation temperature required to initiate this time dependent relaxation of the material may be seen as primary driver of the process. Other factors may have an effect on relaxation

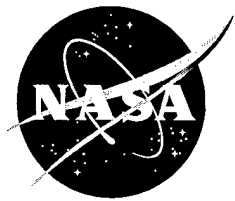

Vectran Fiber Time Dependant Behavior and Additional Static Loading Properties

*Russell B. Fette, Marjorie F. Sovinski
Goddard Space Flight Center
Greenbelt, Maryland*

November 2004

The NASA STI Program Office ... in Profile

Since its founding, NASA has been dedicated to the advancement of aeronautics and space science. The NASA Scientific and Technical Information (STI) Program Office plays a key part in helping NASA maintain this important role.

The NASA STI Program Office is operated by Langley Research Center, the lead center for NASA's scientific and technical information. The NASA STI Program Office provides access to the NASA STI Database, the largest collection of aeronautical and space science STI in the world. The Program Office is also NASA's institutional mechanism for disseminating the results of its research and development activities. These results are published by NASA in the NASA STI Report Series, which includes the following report types:

- **TECHNICAL PUBLICATION.** Reports of completed research or a major significant phase of research that present the results of NASA programs and include extensive data or theoretical analysis. Includes compilations of significant scientific and technical data and information deemed to be of continuing reference value. NASA counterpart of peer-reviewed formal professional papers, but having less stringent limitations on manuscript length and extent of graphic presentations.
- **TECHNICAL MEMORANDUM.** Scientific and technical findings that are preliminary or of specialized interest, e.g., quick release reports, working papers, and bibliographies that contain minimal annotation. Does not contain extensive analysis.
- **CONTRACTOR REPORT.** Scientific and technical findings by NASA-sponsored contractors and grantees.

- **CONFERENCE PUBLICATION.** Collected papers from scientific and technical conferences, symposia, seminars, or other meetings sponsored or co-sponsored by NASA.
- **SPECIAL PUBLICATION.** Scientific, technical, or historical information from NASA programs, projects, and missions, often concerned with subjects having substantial public interest.
- **TECHNICAL TRANSLATION.** English-language translations of foreign scientific and technical material pertinent to NASA's mission.

Specialized services that complement the STI Program Office's diverse offerings include creating custom thesauri, building customized databases, organizing and publishing research results ... even providing videos.

For more information about the NASA STI Program Office, see the following:

- Access the NASA STI Program Home Page at <http://www.sti.nasa.gov>
- E-mail your question via the Internet to help@sti.nasa.gov
- Fax your question to the NASA STI Help Desk at (301) 621-0134
- Telephone the NASA STI Help Desk at (301) 621-0390
- Write to:
NASA STI Help Desk
NASA Center for AeroSpace Information
7121 Standard Drive
Hanover, MD 21076-1320

NASA/TM—1999-000000



Vectran Fiber Time Dependant Behavior and Additional Static Loading Properties

*Russell B. Fette, Marjorie F. Sovinski
Goddard Space Flight Center
Greenbelt, Maryland*

National Aeronautics and
Space Administration

Goddard Space Flight Center
Greenbelt, MD 20771

November 2004

Acknowledgments

The authors would like to acknowledge the assistance of those individuals who aided in the preparation of this document. Mr. Michael Viens reviewed the report repeatedly for content and style. The authors would also like to thank Mr. David Puckett, Mr. Dewey Dove, Mr. Alex Montoya, and Mrs. Debbie Thomas who aided in testing at NASA GSFC.

"The views expressed in this article are those of the author and do not reflect the official policy or position of the United States Air Force, Department of Defense, or the U.S. Government."

Available from:

NASA Center for AeroSpace Information
7121 Standard Drive
Hanover, MD 21076-1320
301-621-0390

National Technical Information Service
5285 Port Royal Road
Springfield, VA 22161
703-605-6000

Table of Contents

	PAGE
Abstract	1
Introduction	1
Background	1
Creep and Stress Relaxation.....	1
Coefficient of Thermal Expansion	3
Experimental	3
Specimens.....	3
Test Methods.....	4
Equipment.....	5
Results	5
Creep Testing	5
Stress Relaxation Testing	5
Coefficient of Thermal Expansion Testing.....	7
Out-gassing.....	7
Discussion	7
Creep Testing.....	7
Stress Relaxation Testing.....	8
Material Construction Effects.....	8
Coefficient of Thermal Expansion Testing.....	8
Conclusions and Recommendations	9
References	10
Appendix: Glove Data	11

List of Tables

	PAGE
1. Summary of Creep Constants.....	5

2. Summary of Relaxation Constants.....	6
3. Kevlar vs. Vectran Relaxation.....	6
4. Out-gassing report.....	7
5. Creep vs. Stress Relaxation.....	8
6. Comparison of High Strength Fibers.....	12
7. Summary of Literature Properties for Vectran and Kevlar 49.....	13
8. Summary Strength testing on Vectran HS type 97 in spliced configurations.....	14
9. Summary Strength testing on Kevlar 49 in spliced configurations.....	14

List of Figures

	PAGE
1. Strain vs. Time Behavior of Creep.....	2
2. Specimen Diagram.....	3
3. Creep Curves.....	5
4. Manufacturer's Creep Data.....	6
5. Vectran Relaxation at NASA GSFC.....	6
6. Normalized Vectran Relaxation at NASA GSFC.....	6
7. Depiction of Creep Curve with Inflection to Steady State Creep.....	7
8. CTE Plot of Vectran HS.....	9

Vectran Fiber Time Dependant Behavior and Additional Static Loading Properties

Abstract

Vectran HS appears from literature and testing to date to be an ideal upgrade from Kevlar braided cords for many long-term static-loading applications such as tie-downs on solar arrays. Vectran is a liquid crystalline polymer and exhibits excellent tensile properties. The material has been touted as a zero creep product. Testing discussed in this report does not support this statement, though the creep is on the order of four times slower than with similar Kevlar 49 products. Previous work with Kevlar and new analysis of Vectran testing has led to a simple predictive model for Vectran at ambient conditions. The mean coefficient of thermal expansion (negative in this case) is similar to Kevlar 49, but is not linear. A positive transition in the curve occurs near 100 °C. Out-gassing tests show that the material performs well within parameters for most space flight applications. Vectran also offers increased abrasion resistance, minimal moisture regain, and similar UV degradation. The effects of material construction appear to have a dramatic effect in stress relaxation for braided Vectran. To achieve the improved relaxation rate, upgrades must also examine alternate construction or preconditioning methods. This report recommends Vectran HS as a greatly improved replacement material for applications where time dependent relaxation is a major factor.

Introduction

The EOS series launched in recent years used bury spliced loops of Kevlar braided cord to tie down the solar arrays during launch. A requisite tension remaining in the loops became especially critical during the cutting of the loops with thermal knives in orbit to deploy the arrays. Previous testing at Goddard SFC showed Kevlar has a high rate of stress relaxation with a wide margin of error in prediction. Additionally, it has complicated environmental response. Similar applications such as the GLAST Tracker Tower which use tensioning cables are also concerned with break strength, relaxation, Ultra-Violet (UV) degradation, abrasion, and ease of termination (splice etc...¹.

A search was made for a material with better performance characteristics than Kevlar, and the most promising was Vectran. See Table 6 in Appendix A for a comparison of fibers researched. Vectran is a liquid crystalline polymer (LCP). The resin is anisotropic before it is spun through tiny holes producing a highly oriented fiber structure with excellent tensile properties.²

Vectran is being considered as a possible replacement material primarily due to improved time dependant behavior. The manufacturer

claims the material exhibits no measurable creep when loaded up to 50% of its breaking load.² This statement is contradicted by NASA testing, but the measured and quantified creep is on the order of five times less than Kevlar.

Background

Table 7 in Appendix A reports material properties for Vectran with a direct comparison to Kevlar 49 as reported by available literature. Key points include improved strength, abrasion resistance, and creep performance.

Creep and Stress Relaxation

The time dependent load behavior of materials is characterized by creep and stress relaxation. Creep describes a material that experiences an increasing total strain with time under a constant load. Stress relaxation refers to a material that is initially strained to a fixed dimension, and then over time the stress within the material decreases. This phenomenon is observed to some degree in almost every engineering material with the exception of a perfect single crystal.^{3,4}

The activation temperature required to initiate this time dependent relaxation of the material may be seen as primary driver of the process. Other factors may have an effect on relaxation

such as moisture, pressure, and the degree of the applied strain or load. All of these vary greatly with each material and there are also numerous underlying molecular processes.^{3,4}

Metallic materials in general relax very slowly and require high activation energies as compared to polymers. Polymers display viscoelastic properties where their behavior can be described as a mix between a pure solid (governed by Hooke's Law) and a pure liquid (governed by the laws of fluid mechanics). Maxwell models consisting of a series of springs and dashpots are often used to describe (at least conceptually) the relaxation of polymers over time.^{3,4}

A classical model of the creep behavior of a material has three stages of strain vs. time behavior of creep (constant load). The first stage consists of the initial elastic and plastic effects of loading and an initially high, but rapidly decaying creep rate. This is followed by steady state creep in stage two where the rate is linear with time, and concludes with tertiary creep where the creep rate rapidly accelerates and ends in failure.⁵ A figure representing these three phases is found below.

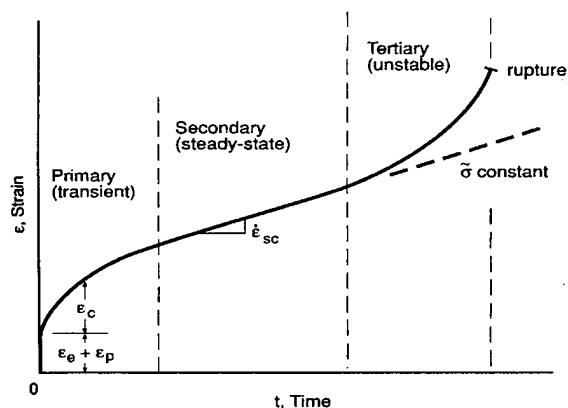


Figure 1. Strain vs. Time Behavior of Creep.⁵

In classic polymer relaxation theory, the time dependant behavior is governed by highly developed equations often based on Maxwell or Voigt models and governed by a spectrum of relaxation times for the material.^{4,6}

To describe real systems, these models become very complicated. In literature and testing at NASA GSFC mathematical fits to creep and relaxation curves proved a better engineering solution for Kevlar relaxation. This allows analysis on a macroscopic level and reliable predictions under the condition that the constants in the mathematical model can be varied to include all pertinent variables.

These mathematical models can be further enhanced if they can be used to predict relaxation after a history of varying conditions. Under the theory of Linear Viscoelasticity, the Boltzmann superposition principle applies. It states that the effects mechanical history are linearly additive.⁴ This may or may not be a valid assumption for Vectran.

Extensive literature review⁷⁻¹² and testing with Kevlar suggested a simple logarithmic creep model might be applied to the results of Creep and Relaxation Testing with Vectran. Therefore, the following equation for steady state stress relaxation is proposed, where Beta is assumed to be negative.

$$\sigma(t) = \sigma_1 \beta \log_{10}(t) + \sigma_1 \quad t > 0 \quad (1)$$

$\sigma(t)$ = Stress at time (t)
 σ_1 = Stress at $t = 1$
 β = Constant
 t = time

The practicality of this predictive model will be discussed following the results section. Making a similar assumption that the material is stress independent, a practical mathematical model for creep can be obtained. β becomes the slope of the curve, divided by the total length of the specimen in tension, measured as built. Models from Guimaraes⁹ and Blades¹² use the initial strain rather than the initial length to create their constants and models. This study proposes an alternate method because of the difficulty of defining a specific point as being the point of zero strain in a multi-fiber material. Using the total length of the specimen allows a more consistent measure because the margin of error

for defining this initial point is smaller. However, the equation is no longer directly comparable to creep, and is insensitive to the load used for testing. Therefore, the constants developed will be specific to a degree of applied load. The result is equation (2) below.

$$e(t) = l_1 \beta \log_{10}(t) \quad t > 0 \quad (2)$$

$e(t)$ = elongation at time t

β = Constant

t = time

l_1 = length at $t = 0$, prior to any loading

These equations presuppose that the item in question has been pre-conditioned sufficiently to remove all construction settling.

Coefficient of Thermal Expansion

The coefficient of thermal expansion (CTE) is the relationship between expansion in a linear direction and the temperature. The coefficient of thermal expansion is especially important when working with different materials. The CTE may be used to determine the thermal compatibility of materials that will be bonded together, to make sure that they will expand at a comparable rate. If materials with different CTE values are bonded together, they will expand/contract at different rates as they are heated/cooled and the bond could ultimately fail or the materials could move. The CTE is also used in conjunction with mechanical measurements to determine the feasibility of using a material for a project, i.e. whether its properties fit the needs of the project. The coefficient of thermal expansion (α) is calculated using the formula:

$$\frac{l_f - l_o}{l_o} = \alpha(T_f - T_o), \quad (3)$$

l_o = Initial length

T_o = Initial temperature

l_f = Final length

T_f = Final temperature.¹³

Experimental

The configuration of tested fibers, the equipment, and the specific test methods are all critical factors in this analysis.

Specimens

Previous experience in testing Kevlar braided cord accelerated the development of a suitable test specimen for the braided Vectran. The material tested was Vectran HS type 97 in a 12 strand 1500 denier braid rated at 800 lbs according to the manufacturer of the cordage, Cortland Cable.

A simple bury splice creating an eye loop on each end (Figure 2) proved to be the best method of gripping the cord and placing it in tension, based on previous testing and research into methods during analysis of Kevlar braided cords. The length of the splice was varied to find the shortest splice needed to cause failure in the cord and not splice pullout. A four-inch splice was required, which is similar to that used in pin diameter tests reported by Celanese. Little or no taper zone was used in the relatively thin Vectran specimens.

Direct comparison Kevlar creep specimens were built to the same dimensions, but had a larger taper zone primarily due to necessity in splicing this thicker cordage. They were made from surplus Kevlar 49 braided cordage. The braid weave is not identical to that of the Vectran.

The final specimen configuration is pictured below. A total length of 20 inches was chosen to maximize the un-spliced length of material, and also to best fit the environmental chamber included in the test setup.

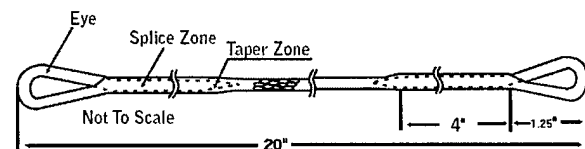


Figure 2. Specimen Diagram [Adapted from Celanese.]²

Tensile Testing was performed on the specimens to determine the average breaking strength in this configuration. The specimens were loaded through ½ inch steel pins in mechanical testing machines and tensioned at a rate of 0.5 in/min crosshead speed. The cable was reported to have a strength of 800 lbs. With this configuration the average breaking strength was 760 lbs. Total length of the tensile specimens was 12 inches, splice dimensions were identical to those above. Kevlar specimens were tested in a similar manner.

A summary of all tensile testing results including specimens spliced and tested as a complete loop similar to that used in the array tie-downs is included in Appendix A as Tables 8 (Vectran) and 9 (Kevlar).

Test Methods

In this properties discovery process, a wide variety of test methods were employed.

Creep Test Creep Testing was performed on a mechanical test machine with a hydraulic actuated ram to achieve precise and virtually instantaneous control over load, along with a convenient method to obtain creep information by analyzing the crosshead displacement. A rapidly moving actuator is especially helpful to match the rapid initial displacements due to construction effects of the braid. An environmental chamber surrounded the specimen during testing and was used to control temperature between 0 and 60°C.

Specimens were built by hand, inserted over half inch pins in the mechanical tester, and loaded to the final test load (which varied between 25 and 50% of breaking strength) at a rate of 200 lb/min. No preconditioning was performed for these specimens. It was assumed that the effects of the rope construction would be eliminated over the initial part of the constant load test, in the same way as pre-stressing them.

The data was analyzed by using the logarithmic slope fit function of KaleidaGraph WIN v 3.5x. The data period covered included all points after

five hours. This point was chosen because it was after the inflection point noted previously and consistently eliminated the area not showing a linear response. The slope constant was the number of interest from this equation.

The units from this result are mils/log(t). This was converted to %e/log(t) (% elongation) by dividing by the total length of the test specimen (loop end to loop end). This number is the slope constant β , referred to in the equation (2).

Stress Relaxation Test The second test conducted was a simulation of the stress relaxation test used by an independent testing company to report zero creep for Vectran. Four cables constructed in the same manner as for creep testing were loaded into steel load frames, in line with precision load cells. Two specimens were tensioned to 60% of their breaking strength, and two at 40%. They were allowed to relax for one day, and then re-tensioned to the original load. Over the course of the test lasting ten weeks, the cables were re-tensioned once more.

Data was analyzed by taking the logarithmic best fit of the steady state portions of each relaxation curve. This constant was divided by the load applied to obtain the constant β from equation (1). The slope constants reported were taken from data 2.5 hours after loading where all curves were visually log-linear.

An independent testing company performed a stress relaxation test to infer properties for both stress relaxation and creep. They performed the test at 20% of material strength in a static test fixture, and monitored the load in two load cells at the ends of the sample. Tensions were recorded periodically for 6 months. The material configuration was a single strand wire-lay. This method helps to minimize the construction stretch component as compared to a braided rope. The specimen "was loaded very slowly to 20% using a turnbuckle arrangement, and not subsequently re-tensioned for the entire six month period. There was no previous loading on the rope."

Coefficient of Thermal Expansion Test The third test conducted was an analysis of the CTE across a specified temperature range for Vectran. The coefficient of thermal expansion for the Vectran was measured using a TA Instruments TMA 2940 Thermomechanical Analyzer. The samples were prepared by clamping a small piece of the sample at both ends using the film/fiber clamps for the TMA 2940. The CTE of the samples was then measured using the film/fiber accessory, which measures the CTE by holding the sample in tension and measuring the change in length as the sample is heated. Each of the samples was tested over a temperature range of -150°C to 150°C using a ramp rate of $5^{\circ}\text{C}/\text{minute}$. Nitrogen was used as the purge gas for the TMA, and liquid nitrogen was used to cool the samples to -150°C .

Equipment

Creep testing was performed on an INSTRON Model 1350 Dynamic Testing Machine. Thermal control was achieved through an INSTRON Testing Oven Model 3119-409-21. Stress Relaxation Testing was performed in stainless steel fixture formed by fixing square plates at either end of threaded rods. A through hole connected to a $\frac{1}{2}$ inch pin yoke provides the load path. Turning a fine thread nut tensions the system. Sensotec load cells from Honeywell were calibrated before testing at Goddard SFC. One Model 31 Precision Miniature Load Cell with a range of 500 lbs was employed per fixture.

CTE measurements were performed on a TA instruments Thermo-mechanical Analyzer: TMA 2940. Liquid Nitrogen was used to cool the specimens initially to begin testing.

Results

Creep Testing

Figure 3 depicts four creep data runs taken at 50% of the breaking strength for 20-90 hours, normalized for comparison. The specimens were run at approximately 23°C in the lab environment. Temperature and humidity were

not controlled. The summary of valid (see discussion) creep constants is found as Table 1.

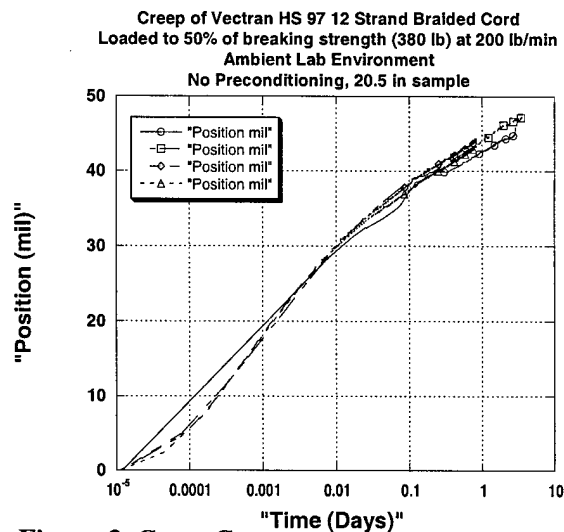


Figure 3. Creep Curves.

Table 1. Summary of Creep Constants.

	Time (hrs)	Creep Rate $\beta(\%/ \log(t))^*$
Vectran 50% of Breaking Load (23 C)		
Vectran C2d	20	0.00031
Vectran C2e	20	0.00029
Vectran C2g	90	0.00029
Vectran C2h	70	0.00026
Average		0.00029
Vectran 25% of Breaking Load (23 C)		
Vectran C1a	20	0.00048
Vectran C1b	62	0.00032
Average		0.00040
Kevlar 34% of Breaking Load (23 C)		
Kevlar C2a	90	0.00122
Kevlar C2b	90	0.00176
Average		0.00149
Vectran 50% of Breaking Load (60 C)		
Vectran C6b	20	0.00026
Vectran C6d	20	0.00029
Average		0.00028

* note that % refers to a weighted %.

Stress Relaxation Testing

An independent testing company reported zero creep for Vectran HS wire rope from the data produced in their stress relaxation test. Slight variations were attributed to room temperature fluctuations. This phenomenon is expected due

to CTE mismatches with the frame and sample, and was seen in testing at NASA as well. Their charted results were recreated by Celanese for their Engineering Data Sheet.²

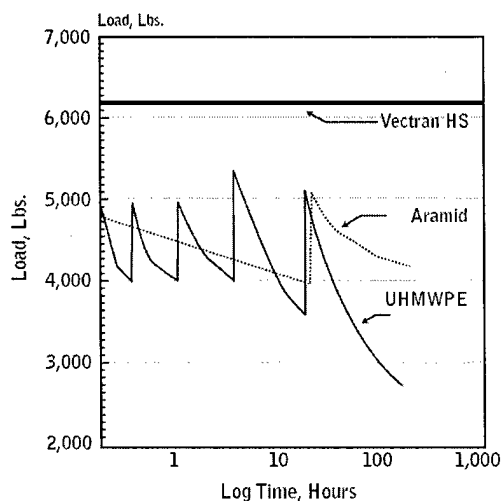


Figure 4. Manufacturer's Creep Data.²

A similarly formatted graph of the data generated in testing at GSFC is found as Figure 5, and a normalized graph as Figure 6.

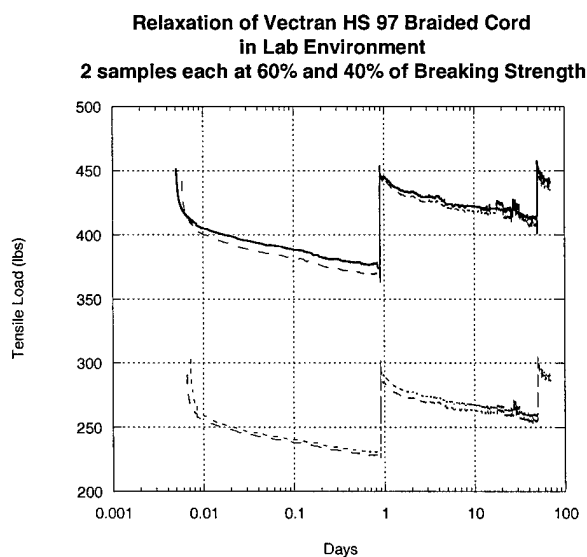


Figure 5. Vectran Relaxation at NASA GSFC.

When the results from Figure 5 are normalized both for time and load the results can be better examined. This is depicted in Figure 6, where each re-tensioning has also been reset to $t=1$.

The resulting creep constants are reported in Table 2 and compared with the summary of results from previous Kevlar stress relaxation testing. Table 3 shows an additional comparison test of Kevlar and Vectran relaxation.

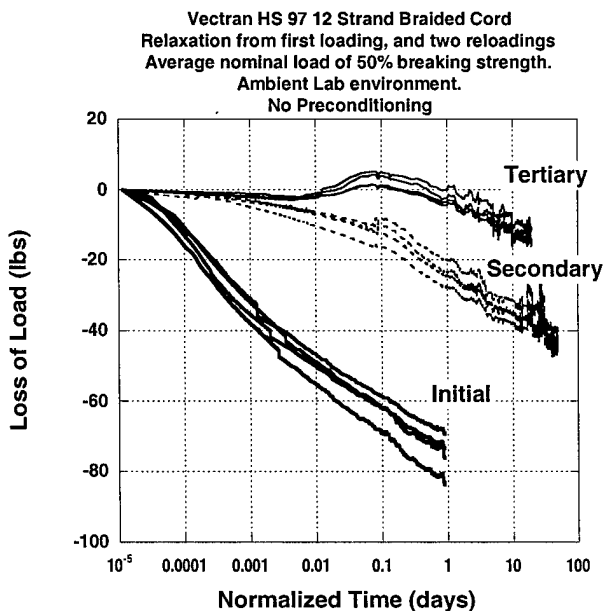


Figure 6. Normalized Vectran Relaxation at NASA GSFC.

Table 2. Summary of Relaxation Constants.

Vectran 10 Week Relaxation Test				
	Strength %*	Initial %/log(t)*	Secondary %/log(t)*	Tertiary %/log(t)*
Fixture 1	0.59	-0.028	-0.025	-0.018
Fixture 2	0.59	-0.031	-0.026	-0.018
Fixture 3	0.39	-0.036	-0.034	-0.027
Fixture 4	0.39	-0.034	-0.035	-0.026
	Average	-0.032	-0.030	-0.022
Kevlar**	0.60	-0.015	-0.011	

* note that % refers to a weighted %.

**From previous NASA testing

Table 3. Kevlar vs. Vectran Relaxation.

2 Day Direct Comparison		
Slope after 1 retensioning		
	% break	%/log(t)
Kevlar	0.2	-0.0388
Kevlar	0.2	-0.0398
Vectran	0.2	-0.0658
Vectran	0.2	-0.0612
% is weighted %		

Coefficient of Thermal Expansion Testing

Each sample was heated from -150°C to 150°C, and a mean coefficient of thermal expansion of $-5.78\mu\text{m}/\text{m}\cdot^\circ\text{C}$ was found over a range of -125°C to 0°C. A coefficient of thermal expansion of $-4.8\mu\text{m}/\text{m}\cdot^\circ\text{C}$ from 20°C to 145°C was reported by Celanese, the manufacturer of the Vectran fiber. Additional CTE data provided by an independent company lists a CTE of $-4.89\mu\text{m}/\text{m}\cdot^\circ\text{C}$ from 150°C to -160°C.

Out-gas Testing

Standard out-gassing tests were also performed at NASA and the pertinent results are included as Table 4. The results show that the material performs well within the typical limits to qualify it for space flight. IR Spectroscopy showed the cords tested were coated with optional silicon oil, which can be declined for Space Flight.

Table 4. Out-gassing report.

Micro VCM Out-gassing Test	
Per ASTM E-595-93, Three runs	
Vectran HS Type 97 1500 denier 12 std Braid	
tested as received	
Average Total Mass Lost	0.06%
Average WVR @ 50% RH	0.01%
Average CVCM	0.01%
Test by Dewey Dove and Debbie Thomas, NASA GSFC 1 June 2004.	

Discussion

A variety of differently constructed rope products are compared throughout this report. A primary assumption of this report is that the effects of material construction (yarn twist, weave, braid, and wire rope packing) are eliminated during initial tensioning and the material will subsequently perform similarly to a single fiber. For Creep testing, this break-in period (also known as pre-conditioning) is accomplished during the initial period of constant loading in the test. For stress relaxation, the first loading curve and relaxation constant can be assumed to be dominated by construction artifacts as well.

The validity of this assumption is borne out by testing of Kevlar braided cords during 2003-04 at NASA GSFC where the relaxation constants generated during testing of 12 strand braided Kevlar included fiber results in their margin of error. It is also supported by a rope creep study.⁹

Temperature fluctuations in tests at ambient lab conditions caused disruptions in both creep and stress relaxation curves. These were minor, and are not assumed to have impacted the results.

Creep Testing

The most instructive information on the response of Vectran came from creep testing. Although for most applications at NASA, stress relaxation is the more pertinent test, creep testing allows quicker and more controlled results that can cover a wider range of variables. Also, under certain simplifications, the Boltzmann superposition principle can be used to directly relate creep to stress relaxation.

In creep testing, there was a distinct inflection point observed on many of the test curves of displacement vs. Log (t). The visually distinct inflections generally occurred between 0.5 and 4 hours. Previous testing implies that this may represent the end of a period when fiber lays are aligned and straightened. A graphic depiction of one creep curve with a distinct inflection is represented below.

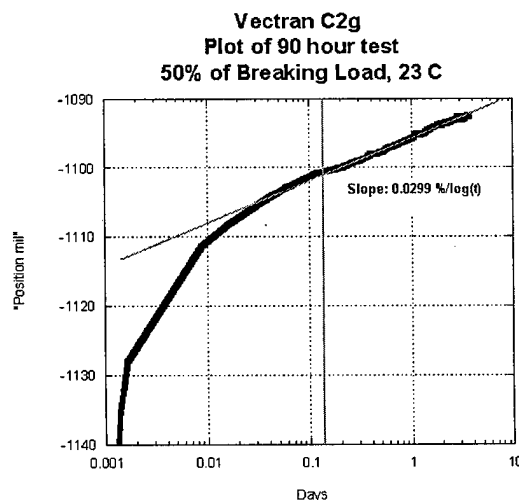


Figure 7. Depiction of Creep Curve with Inflection to Steady State Creep.

Beginning after the inflection is a period of steady state creep, which should demonstrate the material properties of the specimen.

For the reported creep slopes, the only results considered valid where those in tests which covered a period of at least twenty hours. The first factor for this decision was a visual inflection point in the response of Kevlar observed as late as 4 hours into the test. This inflection point appears to represent a change from an initially rapid but declining response over log time before achieving a steady state response. Additionally, observation of initial results showed that the slope constant was lower with a longer test, until reaching a plateau with the twenty-hour tests conducted. Test runs demonstrating large environmental interruptions or testing artifacts were also disregarded.

The two long-term tests performed at 60 °C did not reveal a significant departure from the results at room temperature. Additional testing will be required to determine if the Boltzmann superposition principle will further simplify the results. It is unclear from either stress relaxation or creep testing if the material exhibits a distinctly different rate at different loads.

Stress Relaxation Testing

The results of the stress relaxation test show a decelerating initial reaction tapering to a steady state response as expected. After each re-tensioning there is an additional break-in period or settling before steady state at a logarithmic rate is achieved. This is similar to an inverse of each creep curve reported. Further testing should analyze whether over-loading and the decreasing to a final start load eliminates this issue.

Material Construction Effects

Testing results indicate more rapid creep and relaxation at lower loads. This information could be indicative of construction characteristics of the braided cord still having a significant effect on the material behavior during steady state due to insufficient preconditioning, in contrast with the initial assumption. Further testing should study the effects of relaxation from higher loads

and preconditioning by over-loading to elucidate and eliminate any construction effects.

The results of stress relaxation for Vectran when compared to Kevlar show an opposite response than that of creep. The most likely explanation is a change in the way the construction artifacts are eliminated. Kevlar has been demonstrated to overcome the effects of yarn twist and braid after an initial relaxation and re-tensioning as discussed in the assumptions. This may not be applicable for Vectran. Creep testing could be less susceptible to construction effects as it is re-tensioned constantly. The difference in test results for stress relaxation and creep compared for Kevlar and Vectran are found below.

Table 5. Creep vs. Stress Relaxation.

Average Ratios of Rates of Kevlar and Vectran Time Dependent Behavior			
<i>Creep</i>			
Kevlar			Vectran
4.3	to		1
<i>Stress Relaxation</i>			
Kevlar			Vectran
0.5	to		1

In light of this information, stress relaxation applications should consider alternate material constructions. E-mail correspondence with Mr. Douglas Bentley (mechanical properties engineer at Cortland Cable) provided some guidance on ways to reduce the construction creep/relaxation. Reducing the twist in the component strands of a braided cord or reducing the helix angle of the braid can significantly reduce the amount of elongation due to construction or geometry of the braid. Braided cords have provided a convenient geometry for terminating the ends with a splice, but there are other options such as continuously wound grommets, or cable terminations such as discussed for the GLAST project.¹

Coefficient of Thermal Expansion Testing

Due to the fact that the Vectran cording is formed by braiding 12 strands of fiber, testing was performed both on a single strand from the braid as well as on the braid as a whole. Testing

of a single strand was preferred, as the twelve strands in the braid increases the amount of twist in the fiber and may alter the measured coefficient of thermal expansion. The effect that the braiding has on the CTE is reflected in the data. Two runs were performed on the TMA 2940 using a single strand of Vectran, and one run was done using the 12-strand braid.

The measured CTE for the Vectran fiber is comparable to the CTE values reported by the independent company; however, the expansion curves from both the TMA 2940 and the independent company show a small transition at approximately 100°C. For the TMA 2940 measurements, the CTE was calculated from the expansion curve over the range of -125°C to 0°C, and was limited by the presence of the transition in the curve. Conversely, the coefficient of thermal expansion calculated by the independent company included the portion of the expansion curve with the transition by taking the linear regression of the curve. Given that the coefficient of thermal expansion is often provided as a linear value, the CTE for the Vectran would be more useful if it were provided over a temperature range that excluded the transition in the curve, rather than calculating the CTE using linear regression.

Several different test configurations were used to determine the cause of the transition. In addition to testing the Vectran over the -150°C to 150°C range, several samples were also tested from room temperature to 150°C, and a sample was also run using a weight to provide more tension in the sample. Finally, a sample of the 12-strand Vectran braid was tested over the full -150°C to 150°C temperature range. As mentioned previously, because the braid consists of twelve strands, the fibers within the braid are twisted and are therefore not oriented in a linear direction. It was therefore expected that testing the Vectran in this configuration would provide a higher CTE. Analysis of the braid of Vectran found that the coefficient of thermal expansion for the braid was $-12.5\mu\text{m}/\text{m}\cdot^\circ\text{C}$, almost triple the reported CTE value. Figure 8 provides a comparison of the difference in CTE found by

testing the entire braided cord as opposed to a single strand.

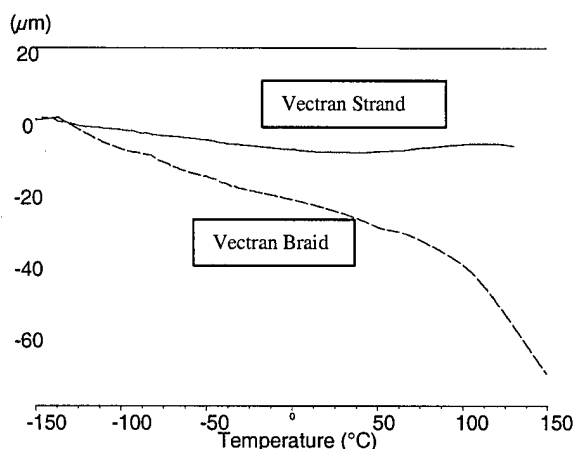


Figure 8. CTE Plot of Vectran HS.

Conclusions and Recommendations

1. Vectran HS type 97 appears from literature and testing to date to be an ideal upgrade from Kevlar Braided Cords for many long-term, static-loading applications such as tie-downs on solar arrays.
2. Key improvements in performance include creep/relaxation, moisture regain, abrasion resistance, and strength properties.
3. Vectran is NOT a zero creep material. This assumption was uncontested and repeated in available literature, based on a stress relaxation test. The material experienced logarithmic creep and stress relaxation.
4. Vectran creeps at a rate 4 times slower than Kevlar.
5. A mean coefficient of thermal expansion of $-5.78\mu\text{m}/\text{m}\cdot^\circ\text{C}$ was found over a range of -125°C to 0°C.
6. Vectran braided cord must be pre-loaded to remove the effects of fiber weave and lay before a reliable creep or stress relaxation rate can be expected.

7. Continuing Creep and Stress Relaxation testing should analyze effects of construction artifacts in time dependent behavior more fully. Contact Whitehill Manufacturing who has offered to help with direct comparison tests between their wire rope product and our braided cord.

References

1. Ney, Steve. Ponslet, Eric. GLAST Tracker Corner Cables and Tower Assembly. Hytec Inc. HTN-102050-0005-A. Los Alamos NM. 12 April 2000.
 2. Vectran Engineering Data. Celanese Acetate LLC. From website Accessed 12 November 2004. <http://www.vectran.net/login.html>.
 3. Askeland, Donald R. The Science and Engineering of Materials. 3rd Ed. PWS Publishing Company, Boston. 1994.
 4. Ferry, John D. Viscoelastic Properties of Polymers. 3rd ed. John Wiley & Sons. 1980.
 5. Dowling, Norman E. Mechanical Behavior of Materials. 2nd ed. Prentice Hall, New Jersey. 1999.
 6. Schmitz, John V. ed. Testing of Polymers. Vol.1. Interscience Publishers of John Wiley & Sons, Inc. 1995.
 7. Duband, L., Hui, L. and Lange, A. Cryogenics 1993. Vol 33, No. 6, 643-647.
 8. Erickson, R.H. Polymer. 26 733 (May 1985).
 9. Guimaraes, G.B. and Burgoyne, C.J. "Creep Behavior of a parallel-lay aramid rope." Journal of Materials Science, Vol 27 1992. 2473-2849.
 10. Riewald, Paul. G. "Kevlar Aramid Fibers, Properties and Industrial Applications." Advanced Textile Materials Conference, April 5-6, 1988.
 11. Wang, John Z. Dillard, D.A. Ward, T.C. Journal of Polymer Science: Part B: Polymer Physics, Volume 30. 1391-1400, 1992.
 12. Zachariades A.E. and Porter. R. S. ed. The Strength and Stiffness of Polymers. Marcel Kekker Inc. 1983.
 13. William D. Callister, Jr., Materials Science and Engineering: An Introduction (New York: Wiley & Sons, Inc., 2000), 661.
 14. Kevlar Aramid Fiber Technical Guide., Dupont Corporation. Received on 21 Aug. 2003 by e-mail.
 15. Yang, H. H., Kevlar Aramid Fiber. John Wiley & Sons, England. 1993.
 16. Materials. Cortland Cable Website. Accessed 10 February 2004. http://www.cortlandcable.com/cortlandcable/materials_printable.asp.
 17. Spectra Product Sheet. Honeywell website accessed February 2004. http://www.spectrafiber.com/products/spectra_900.html.
 18. Twaron The Power of Aramid. Twaron website accessed February 2004. <http://www.twaron.com/index-exp.html>.
-

Appendix A
Vectran Properties

Table 6. Comparison of High Strength Fibers.

Fibers	Creep %/log t	Strength GPa	Modulus GPa	CTE um/m/C	density g/cm ³	Moisture %	Elong/Break %	Max T C	Other
HMPE (6)	Susceptible ¹⁶	Excellent ¹⁶					Very Low ¹⁶	Low ¹⁶	dynamic toughness ¹⁶
Spectra (1000)	creeps	3 ¹⁵	171 ¹⁵		.97 ¹⁵		2.7 ¹⁵ 3.3 ¹⁷	100 ¹⁵	
Spectra (2000)		3.25 ¹⁷	116 ¹⁷		.97 ¹⁷		2.9 ¹⁷		(probably hard splice)
LCP (6)	Zero ¹⁶	Excellent ¹⁶						High ¹⁶	good flex fatigue ¹⁶
Vectran	0.00** ²	3.2 ¹⁵	91 ¹⁵	-4.8* ²	1.47 ¹⁵	0.1 ²	3.3 ²	150 ¹⁵	easy to splice ²
Aramid	Negligible ¹⁶	Excellent ¹⁶						Excellent ¹⁶	
Kevlar (49)	0.016	2.9 ¹⁵	135 ¹⁵	-4.9 ¹⁴	1.45 ¹⁵	3-4 ¹⁵	2.8 ¹⁵	250 ¹⁵	
Twaron (2200)		3.0 ¹⁸	110 ¹⁸						
Technora		3.3 ¹⁵	70 ¹⁵		1.39 ¹⁵		4.3 ¹⁵	250 ¹⁵	
PBO	Negligible ¹⁶	Best ¹⁶						Best ¹⁶	Poor UV ¹⁶
Zylon									
Comparison									
Steel		7.6 ¹⁵	150 ¹⁵		7.8 ¹⁵		4.8 ¹⁵	500 ¹⁵	

* from 20-145C

** up to 50% of ult. Load

Table 7. Summary of Literature Properties for Vectran and Kevlar 49.

Property Comparison of Vectran and Kevlar 49					
	Vectran	Kevlar 49		Source	Source
	LCP	Aramid	units	Vectran	Kevlar
Tenacity	2.9	3.0	GPa	2.	14.
Tenacity	23	24	gpd	2.	14.
Modulus	65	112	GPa	2.	14.
Modulus	525	885	gpd	2.	14.
Yarn Elongation	3.3	2.4	%	2.	14.
Density	1.47	1.44	g/cm ³	15.	14.
Max Use Temperature	150	250	°C	15.	15.
Moisture Regain	<0.1	3.7		2.	2.
Melting Point	330	Chars	°C	2.	2.
TGA 50% weight loss	550	560	°C	2.	2.
% Tenacity at 150 °C	55	81	%	2.	2.
CTE (20-145°C)	-4.8	-4.9	m/m - °C x 10 ⁶	2.	14.
Abrasion Resistance*	10	1	Cycle Ratio	2.	2.
Creep	0.0003	0.0015	%/Log(t)*		
Stress Relaxation	0.033	0.015	%/Log(t)*		
UV Resistance**	similar			2.	2.
Thermal Conductivity	0.37***	0.04	W/(m x K)	***	14.
Cryogenic Strength**	+4.3%	+0.4%	23 to -50°C	2.	14.
Cryogenic Modulus*	+40.0%	+12.5%	23 to -50°C	2.	14.
Sintech Cut Resistance	3.4	1.1	Relative Load	2.	2.

* % refers to a weighted percent

** These are not material properties, but an approximation of results of many varying tests

*** Number was for a polymer chip coupon sample, not fiber, and from a phone interview

Table 8. Summary Strength testing on Vectran HS type 97 in spliced configurations.

Vectran Strength Testing on INSTRON at 0.5 in/min x-head				
Test	Specimen Description	Length (in)	Failure point	Load (lbs)
1	4 inch eye splice	13	splice transition	894
2	3 inch eye splice	13	splice pullout	793
3	3.5 inch loop splice	12	top of loop, no splice	1370
4	3.5 inch loop splice	12	top of loop, no splice	1473
5	3.5 inch loop splice	12	top of loop, no splice	1296
6	4 inch eye splice	12	splice transition	707
7	4 inch eye splice	12	splice transition	790
8	4 inch eye splice	12	splice transition	766
9	4 inch eye splice	12	splice transition	769
avg	4 inch eye splice	12	splice transition	758 stdev 31
avg	3.5 inch loop splice	12	top of loop, no splice	1380 stdev 73

Table 9. Summary Strength testing on Kevlar 49 in spliced configurations.

Kevlar Strength Testing on INSTRON at 0.5 in/min x-head				
Test	Specimen Description	Length (in)	Failure point	Load (lbs)
1	4 inch eye splice & taper	12.5	Center Section	1449
2	4 inch eye splice & taper	12.5	Center Section	1497
avg	4 inch eye splice & taper	12.5	top of loop, no splice	1473 stdev 34